



C-Spout Filter Faucet

Rohl Country Kitchen Collection

- A1635LM** (Mini Metal Lever)
- A1635LP** (Mini Porcelain Lever)
- A1635X** (Mini Five Spoke Handle)
- A1635XM** (Mini Cross Handle)

FEATURES


- Mini metal lever is LM, mini porcelain lever is LP
- Brass construction
- Height 10 19/64" & reach 4 11/16" swivel spout
- Ceramic disc control cartridge
- 1/4" compression connection not included
- Filtered water 1.8 GPM at 45 PSI
- 1 3/8" hole cutout
- Not suitable for R.O. systems or instant hot systems
- Faucet made in Italy. Filter made in Switzerland.

FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel
- Tuscan Brass
- Inca Brass

WARRANTY

- Limited Lifetime*
- * No Warranty on Tuscan Brass Finish (TCB)

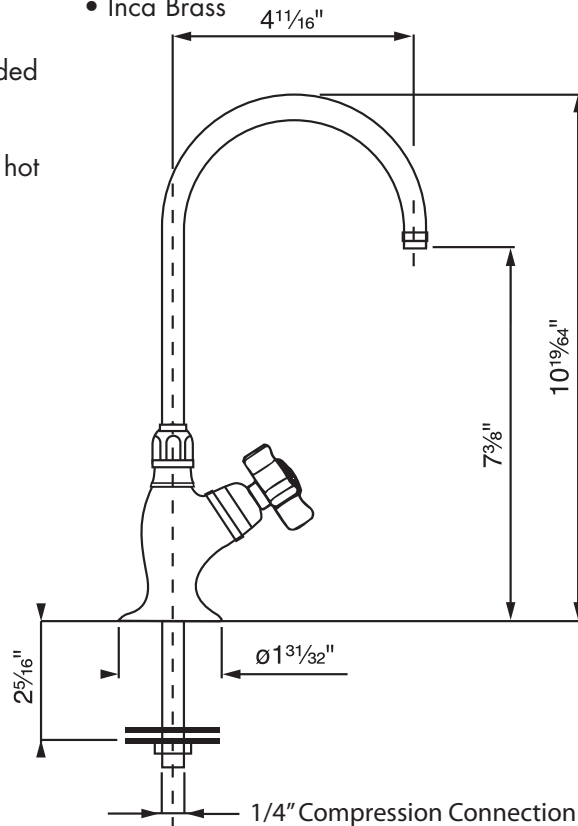

Installation Instructions

INSTALLATION AND CARE & MAINTENANCE GUIDE

Installation Guide

<p>Single tap for filter column spout</p> <p>Art. A1435XM--- - 2 Art. A1435LM--- - 2 Art. A1435LP--- - 2 Art. A1435X--- - 2</p>	<p>Single tap for filter bridge spout</p> <p>Art. A1635XM--- - 2 Art. A1635LM--- - 2 Art. A1635LP--- - 2 Art. A1635X--- - 2</p>
<p>a - Preparation</p> <ul style="list-style-type: none"> - Turn off the cold water line to kitchen sink. - Assemble and connect the water filtration systems (NOT INCLUDED). - Open the standard hole 1 3/8" dia. of the kitchen sink. It may be occupied by a sprayer, soap dispenser or covered by an escutcheon. - Minimum size hole fixing faucet is 15/32" dia. - Maximum size hole fixing faucet is 1 3/8" dia. 	
<p>b - Assembly</p> <ul style="list-style-type: none"> - Unscrew the nut (A). Disassemble the metal disk (B) and the rubber washer (C). - Introduce the faucet (D) in the hole of the kitchen sink, placing the washer (E) between the base of the faucet and the kitchen sink. - Fix the faucet (D) placing, before the rubber washer (C) and then the metal disk (B) and the nut (A). - Connect cold water (see water filtration systems installations instructions - NOT INCLUDED). - 1/4" compression fitting needed. (NOT SUPPLIED). Ensure all connections are firmly tightened. 	
<p>c - Before use</p> <p>Turn on the Cold supply to the faucet. Maximum temperature water supply to the faucet is 145° F. Maximum recommended pressure is 75 psi. Check the installation carefully for leaks. If further building work is to be carried out in the vici of the faucet, it should be covered to prevent paint, adhesive, etc. from damaging the surface.</p>	
<p>PLEASE NOTE:</p> <ol style="list-style-type: none"> 1. DO NOT USE WITH INSTANT HOT SYSTEMS 2. NO FOR USE WITH REVERSE OSMOSIS SYSTEMS 	

Installation Instructions

Installation Instructions

ATTENTION

READ THESE INSTRUCTIONS BEFORE INSTALLATION AND USE OF ALL FAUCETS AND WALL VALVES

INSTALLATION and WARRANTY INSTRUCTIONS TECHNICAL INFORMATION

All flexible hoses are designed and manufactured for use with water in exposed locations only. **Do not expose** to household cleaners, chlorine, chloride, hydrochloric acid or other corrosive chemicals.

- All connections with threads M10x1 male must be hand tighten. **Do not over tighten. Over tightening may cause damage to the hose.**

All faucets washers and o-rings are designed and manufactured for use with water. **Do not expose** to household cleaners, chlorine, chloride, hydrochloric acid or other corrosive chemicals.

Faucets are designed for use with the temperatures and pressures listed below:

- minimum cold water supply 50 °F
- maximum hot water supply 145 °F
- minimum pressure 15 psi
- maximum pressure 75 psi
- maximum fixing torque value = 10 lbf.ft.

Please note: The recommended best pressure for best performance is between 40 psi and 60 psi. More pressure than 60 psi or less pressure than 40 psi may affect the diverting action in side spray faucets.

- Do not use any Rohl Country/ Nicolazzi faucet with sulphorous water.
- The minimum temperature for all faucets is 50 degrees F. Below 50 degrees F will void the warranty.
- When available, filter systems must be placed between hot and cold supply lines and the faucet. Improper use or non-use of filters may make diverting faucets with hand sprays perform poorly.
- Don't modify faucet and their components
- Use only original spare parts if there are replacements to be ordered.
- Installation must be made by authorized plumbers or installers. Improper installation or diagnosis of problems is not covered by the warranty.
- Yearly maintenance of cleaning and flushing is recommended.

Operation and use of any faucet or wall valve that do not conform to these technical instructions will void the warranty.